


## Setting up PTZ cameras on a DVR

1. Connect the video cable from the camera to a camera input on the DVR.
2. Connect the RS-485 to the PTZ terminal on the DVR.

Match positive to positive, negative to negative.

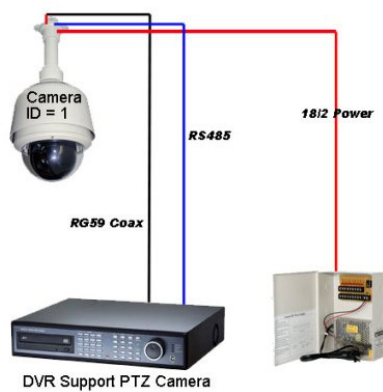

## Multiple Cameras

- Home run all Communication wires to the DVR's terminal. You can have 2 wires coming out of the DVR terminal then connect all cameras to those wires making sure the polarity matches.

Run Siamese RG59 like normal, from each PTZ camera to the DVR



- Daisy chain or parallel cameras



3. Power cycle the camera to get the Communication settings.
4. Enter DVR menu, PTZ setup and match the settings per camera.  
Note: Its best to have all cameras on the same protocol and baud rate but the ID has to be different for each camera.