

# README



## AllGoVision Settings for DW-Spectrum

### Video Analytics




Version 3.7


Document Date: October 2015

This document provides the Settings required in AllGoVision to send alarms to DW Spectrum VMS. Follow the below procedure to send Generic Events to DW Spectrum from AllGoVision.

A) Click Setup > Configure Alarm Servers

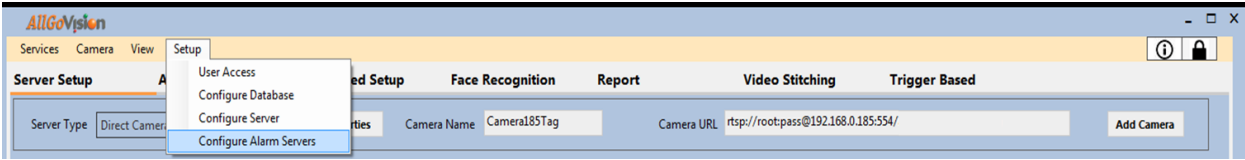

The **Configure Alarm Servers** window will pop up. Configure the details as below:

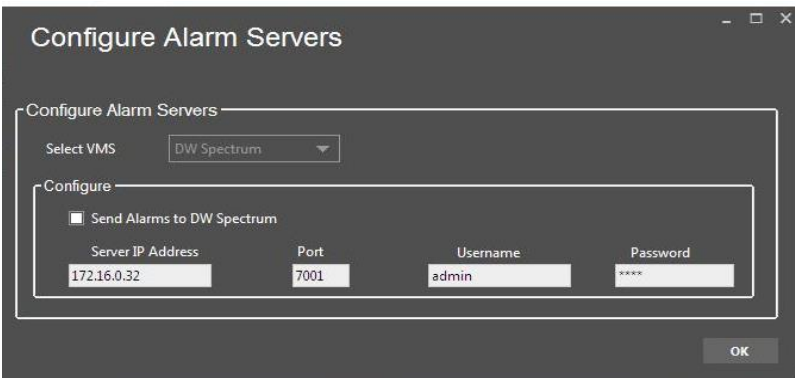

- 1) Select **DW Spectrum** against **Select VMS**
- 2) Check the **Send Alarms to DW Spectrum** checkbox
- 3) Fill in the DW Spectrum Server details such as **Server IP Address** and **Port**
- 4) Fill in the DW Spectrum credentials such as **Username** and **Password**
- 5) Press **OK** button.

B) AllGoVision will fetch the **Camera Reference IDs** from DW Spectrum and send Alarms to it:

