



5MP model 2.1MP/1080p model DWC-MF5Wi4TWDMP DWC-MF2Wi4TWDMP







WHAT'S IN THE BOX

SAFETY AND WARNING INFORMATION

3. Click **'Search'**. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.

Quick Setup and Download

part number you enter.

cause fire or electric shock

9.

end-user.

from tip-over

MF2Wi4TWDMP) min.

the packaging.

 
the dotted line. c. Place the moisture

15.

Guides

- Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference. See the user manual for more information on the proper installation, use and care of the product. These instructions are intended to ensure that users can use the product correctly to avoid danger or property loss. Warnings: Serious injury or death may occur if any of the warnings are neglected.

 Cautions: Injury or equipment damage may occur if any of the cautions are neglected.



In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on a wall or ceiling, the device shall be firmly fixed.

Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.

Make sure the power supply voltage is correct before using the camera. Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product.

Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire.

Securely plug the power cord into the power source. An insecure connection may cause a fire.

When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.

Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock. 5. 6. 8.

cause fire or electric shock.
Do not place conductive objects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.
Do not install in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.
Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) that produce heat.
Keep out of direct sunlight and heat radiation sources. It may cause a fire.
If any unusual smells or smoke come from the unit, stop using the product at once. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock. If this product does not operate normally, contact the nearest service center. Never disassemble or change this product in any way.
When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock. 10. 12. 13. 14.

- 15. electric shock. Use proper safety gear when installing and wiring the product
- Ose proper salety gear when installing and wring the product.

 Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference.

 Do not use this product near water.

 The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. 3. 5. Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the image sensor.

 The Main plug is used as a disconnect device and shall stay readily operable at any time.
- The Main plug is used as a disconnect device and shall stay readily operable at any time. Remove the power adapter from the outlet when then there is lightning. Neglecting to do so may cause fire or damage to the product.

 Do not block any ventilation openings. Install following the manufacturer's instructions.

 A polarized or grounding-type plug is recommended for this product. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. If the provided plug does not fit into your outlet, consult an electrician for replacement.

 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.

 If any laser equipment is used near the product, make sure the surface of the sensor is not exposed to the laser beam as that may damage the sensor module. 10. beam as that may damage the sensor module. If you want to move the already installed product, be sure to turn off the power and then move or reinstall it. Proper configuration of all passwords and other security settings is the responsibility of the installer and/or
- to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt. Use only attachments/accessories specified by the manufacturer.

 Always use hardware (e.g. screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount.

 Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product.

 Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury from tipover. 16. 18.

20. Refer all servicing to qualified service personnel. Servicing is needed when the product has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

following is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt.

Do not touch the camera's lens or sensor module with fingers. If cleaning is necessary, please use a clean cloth

The mounting surface must withstand five times the camera weight. 2. Do not let the cables get caught in improper places or the electric line cover can be damaged. This may cause a short or fire. 3. CAUTION: These servicing instructions are for use by qualified service personnel only. To

reduce the risk of electric shock do not perform any servicing other than that contained

4. This product is intended to be supplied by a UL Listed Power Supply Unit marked "Class 2" or "LPS" or "PS2" and rated 12 Vdc, 0.49A (DWC-MF5Wi4TWDMP) and 0.33A (DWC-

STEP 1 - PREPARING TO MOUNT THE CAMERA

in the operating instructions unless you are qualified to do so.

8. Install the moisture packet in the base of the camera's lens.

a. Remove the moisture absorber from

b. Cut the card and folder along

802-3af shall be a UL Listed device with the output evaluated as a Limited Power Source as defined in UL60950-1 or PS2 as defined in UL62368-1. 6. Unit is intended for installation in a Network Environment 0 as defined in IEC TR 62102. As such, associated Ethernet wiring shall be limited to inside the building.

7. For the installation process, remove the dome cover from the camera module by loosening

the three (3) screws on the dome. Use the wrench provided with the camera.

5. The wired LAN hub providing power over the Ethernet (PoE) in accordance with IEEE

absorber around the camera's lens module.

In most cases it will not need the moisture absorber for more than the first day. In cases where the camera can experience a moisture issue, users must keep the moisture absorber in the camera. The moisture absorber has an

mounting the camera. The moisture absorber prevents moisture from being captured inside the camera's housing, which may cause image performance

NOTE: The camera will generate enough heat to dry moisture during operation.

approximately 6-month life cycle, varying depending on the environment.

WARNING: It is highly recommended that you install the moisture absorber when

issues and damage the camera.

STEP 2 - POWERING THE CAMERA

ø

Ethernet cable.

Part number

DWC-MF5Wi4TWDMP


DWC-MF2Wi4TWDMP

rubber ring.

NOTE:

٥

Poron Ring

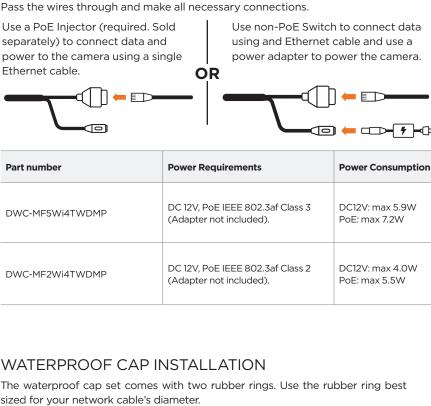

Cables with ø4.5mm to ø5.5mm thickness should use the black rubber ring. Cables over ø5.5mm in thickness should use the white

To ensure moisture seal, make sure the o-ring d is in place

between G and O. In extreme environments use of an outdoor rated sealer is recommended.

CAMERA

RECORDER

≣]

Resetting the camera: To reset the camera, use the tip of a paper clip or a pencil and press the reset button. Pressing the button for five

(5) seconds will initiate a camera-wide reset of all the settings, including network settings.

tightening the lock screw.

Panning 360°

Ь

STEP 3 - INSTALLING THE CAMERA 1. Attach the main body to the mounting bracket or mounting surface by

2. For soft installation surfaces, use the included metal mount plate. Fix the mount plate on the mounting surface using the included screws. Then, press the bottom case onto the mount plate. The three bezels on

4. Once the installation is complete, adjust the camera's tilt, panning and


the case will align and snap lock onto the plate.

rotation as needed. The cameras' max angles are:

Tilting 70°

Reset Button

Rotation 360°

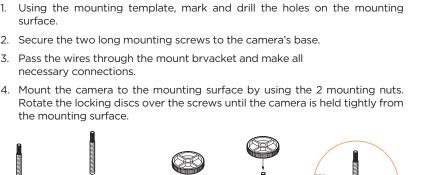

5. Assemble the dome cover over the camera body and detach the

Mounting Template

protecting film from the dome bubble.

Installation using Mount Bolt and Screws:

NOTE: Please refer to DMP guide for additional information on integration and camera control.

listed at patentlist.accessadvance.com. Tel: +1 (866) 446-3595 / (813) 888-9555 digital-watchdog.com

setup, functions and camera settings options.

NOTE: Please see the full product manual for web viewer NOTE: This products is covered by one or more claims of the HEVC Patents

Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday

Rev: 05/23

Protective Film

Moisture Absorber and Guide

1 set

