



IP Cameras

DWC-VSBD04Bi - 2.8mm fixed lens DWC-VSBD04Mi - 2.8 ~ 12mm vari-focal lens



Default Login Information: admin | admin

When logging into the camera for the first time, you will be prompted to set up a new password. You can set the new password using the DW[®] IP Finder[™] software or directly from the camera's browser menu.

WHAT'S IN THE BOX					
Quick setup and installation guides		1 set	Tapping screws - 4pcs	[[[1 set
Mounting template		1	Plastic plugs - 4pcs		1 set
Waterproof cap	\bigcirc	1 set	Machine screw - 1pc	8	1
Rubber plug		1 Set			

NOTE: Download all your support materials and tools in one place

1. Go to: http://www.digital-watchdog.com/resources

- 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
 Click **'Search'**. All supported materials, including manuals
- and quick start guide (QSGs) will appear in the results.

Attention: This document is intended to serve as a quick reference for the initial set-up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

SAFETY AND WARNING INFORMATION

Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future These instructions are intended to ensure that users can use the product correctly to avoid danger or property loss. Warnings: Serious injury or death may occur if any of the warnings are neglected. Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

WARNING

- RNING RNING In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on a wall or ceiling, the device shall be firmly fixed. Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product. Make sure the power supply voltage is correct before using the camera. Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire. Securely plug the power cord into the power source. An insecure connection may cause a fire. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury. Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock. Do not install in a location subjects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects. Do not install in a humid, dusty, or sooty locations. Doing so may cause fire or electric shock. Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) that produce heat. Keep out of direct sunlight and heat radiation sources. It may cause a fire. 1 2.
- 3. 4.
- 5.
- 6.
- 7. 8.
- 9.
- 10
- 11.
- Keep out of direct sunlight and heat radiation sources. It may cause a fire. If any unusual smells or smoke come from the unit, stop using the product at once. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock. 13.
- If this product does not operate normally, contact the nearest service center. Never disassemble or change this product in any way. When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or 14. 15. electric shock

CAUTION

- Use proper safety gear when installing and wiring the product. Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive 2. vibration or magnetic interference.
- 3
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. 4 5 Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the
- image sensor. The Main plug is used as a disconnect device and shall stay readily operable at any time. 6.
- . do co emove? damage to the product
- damage to the product. Do not block any ventilation openings. Install following the manufacturer's instructions. A polarized or grounding-type plug is recommended for this product. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. If the provided plug does not fit into your outlet, consult an electrician for replacement. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product. 8 9 10
- If any laser equipment is used near the product, make sure the surface of the sensor is not exposed to the laser 11.
- If any laser equipment is used here the product, make sure the surface of the sensor is not exposed to the last. beam as that may damage the sensor module. If you want to move the already installed product, be sure to turn off the power and then move or reinstall it. Proper configuration of all passwords and other security settings is the responsibility of the installer and/or 13. end-user
- encluser. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt. Do not touch the camera's lens or sensor module with fingers. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device 14.
- 15. from dirt.
- 16
- Irom and. Use only attachments/accessories specified by the manufacturer. Always use hardware (e.g. screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product. Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury 17. 18
- 19. from tip-over
- Construction of the product has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

STEP 1 - PREPARING TO MOUNT THE CAMERA

Using the mounting template or the camera itself, mark and drill the necessary holes in the wall or ceiling.

STEP 2 - POWERING THE CAMERA

Pass the wires through and make all necessary connections.


Use a PoE Switch or PoE Injector to connect data and power to the camera using a single Ethernet cable. Use a non-PoE Switch to connect data using an Ethernet cable and use a power adapter to power the camera.



Power requirements	Power consumption
DC12V, PoE (IEEE 802.3af class 3). Adapter not Included.	<8W

If needed, install the waterproof cap.

NOTE: In extreme environments use of an outdoor rated sealer is recommended. CAMERA RECORDER 0 Ξ SEAL TAPE III 7 0

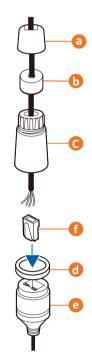


STEP 3 - INSTALLING THE CAMERA

0


Ξ

- 1. Attach the main body to the mount bracket by tightening the lock screw.
- Adjust the camera's tilt and angle by 2. loosening the tilting ring at the base of the camera's bracket.

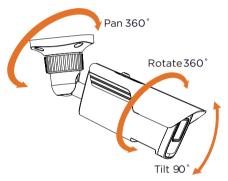

STEP 4 - CABLING


Use the diagram below to properly connect power, network and audio to the camera.

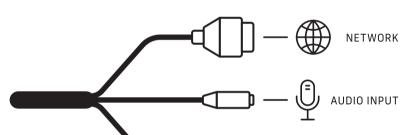





STEP 5 - MANAGING THE SD CARD (OPTIONAL)

- 1. Remove the cover dome to access the SD card slot.
- 2. Insert class 10 SD/SDHC/SDXC card into the SD card slot (max 256GB).
- 3. Press the card inward until it clicks to release from the card slot.

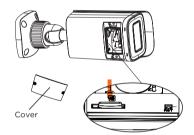

Resetting the camera: Press the reset button for five (5) seconds to initiate a reset of all the settings, including network settings.

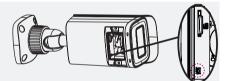

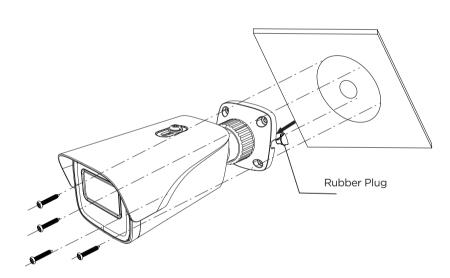

STEP 6 - DW[®] IP FINDER[™]

Use the DW® IP Finder™ software to scan the network and detect all MEGApix® cameras, set the camera's network settings or access the camera's web client.

Camera name Select network to scan Filter results Scan network Show/hide thumbnail view Refresh thumbnail view Bulk (P assignment Bulk codec assignment Bulk date/time assignment Bulk date/time assignment Bulk date/time assignment Bulk password assignment	Professional Annual Annua	140100 0040 013.21.114 (105.0100) 01	Allen Tet See Constraints		 Firmware version Camera's uptime Open IP configuration settings Ping camera Camera's network information Camera's name, IP and MAC addresses
	Correns Corres Accurt @ accurate accurate accur				

Network Setup

- To install the DW IP Finder, go to: <u>http://www.digital-watchdog.com</u> 1.
- 2. Enter "DW IP Finder" on the search box at the top of the page.
- 3. Go to the "Software" tab on the DW IP Finder page to download and install the installation file.
- 4. Open the DW IP Finder and click 'Scan Devices'. It will scan the selected network for all supported devices and list the results in the table. During the scan, the DW® logo will turn grav.
- 5. When connecting to the camera for the first time, a password must be set.
 - a. Check the box next to the camera in the IP Finder's search results. You can select multiple cameras.
 - b. Click "Bulk Password Assign" on the left.
 - c. Enter admin/admin for the current username and password. Enter a new username and password to the right.

Passwords must have a minimum of eight (8) characters and at least four (4) combinations of uppercase and lowercase letters, numbers and special characters. Passwords cannot contain the user ID.

d. Click "change" to apply all changes.

Current Accou	nt	Confirm Hint	Change
	MAC Address	IP Address	Note
Name			

- 6. Select a camera from the list by double-clicking on the camera's name or clicking on the 'Click' button. The pop-up window will show the camera's current network settings. Admin users can adjust the settings as needed. The camera's network settings are set to DHCP by default.
- 7. To access the camera's web page, click on the 'Website' button.
- To save changes made to the camera's settings, 8. enter the username and password of the camera's admin account and click 'Apply'.

DW Camera Settings		×			
Camera Name	DWC-MF4Wi6C6				
MAC Address	00:0D:F1:2B:7B:CB				
O DHCP					
Static IP					
IP Address	192.168.21 .144				
Netmask	255.255.255.0				
Gateway	192.168.21 .1				
DNS	8.8.8				
Camera Account Username admin Password					
Website Reboot	Apply Cancel				

- 🚺 Select 'DHCP' for the camera to automatically receive its IP address from the DHCP server.
- Select 'Static' to manually enter the camera's IP address, (Sub)Netmask, Gateway and DNS information.
- The camera's IP must be set to static if connecting to Spectrum® IPVMS.

🚺 Contact your network administrator for more information.

🕕 To access the camera from an external network, port forwarding must be set in your network's router.

STEP 7 – WEB VIEWER



The GUI display may differ by camera models.

- Find the camera using the DW IP Finder. 1.
- 2. Double-click on the camera's view in the results table.
- 3. Press the 'Website' button. The camera's web viewer will open up in your default web browser.
- 4. Enter the camera's username and password you setup in the DW IP Finder. If you did not setup a new username and password via the DW IP Finder, a message will direct you to setup a new password for the camera before gaining access.

Change admin's passv	vord	×		
Old Password New Password				
Retype Password				
Modify Onvif User				
CHANGE PASSWORD				

To open the camera using the web browser:

- 1. Open a web browser.
- 2. Enter the camera's IP address and port in the address bar. Example: http://<ipaddress>:<port>. Port forwarding may be necessary to access the camera from a different network. Contact your network administrator for more information.
- 3. Enter the camera's username and password you setup in the DW IP Finder.

NOTE: Some menu options may not be available based on the camera model. See the full manual for more information.

Tel: +1 (866) 446-3595 / (813) 888-9555 digital-watchdog.com Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday

Rev: 02/23

Copyright © Digital Watchdog. All rights reserved. Specifications and pricing are subject to change without notice.